


elite[®] FRP Sheet joint detail with DBU Division Bar

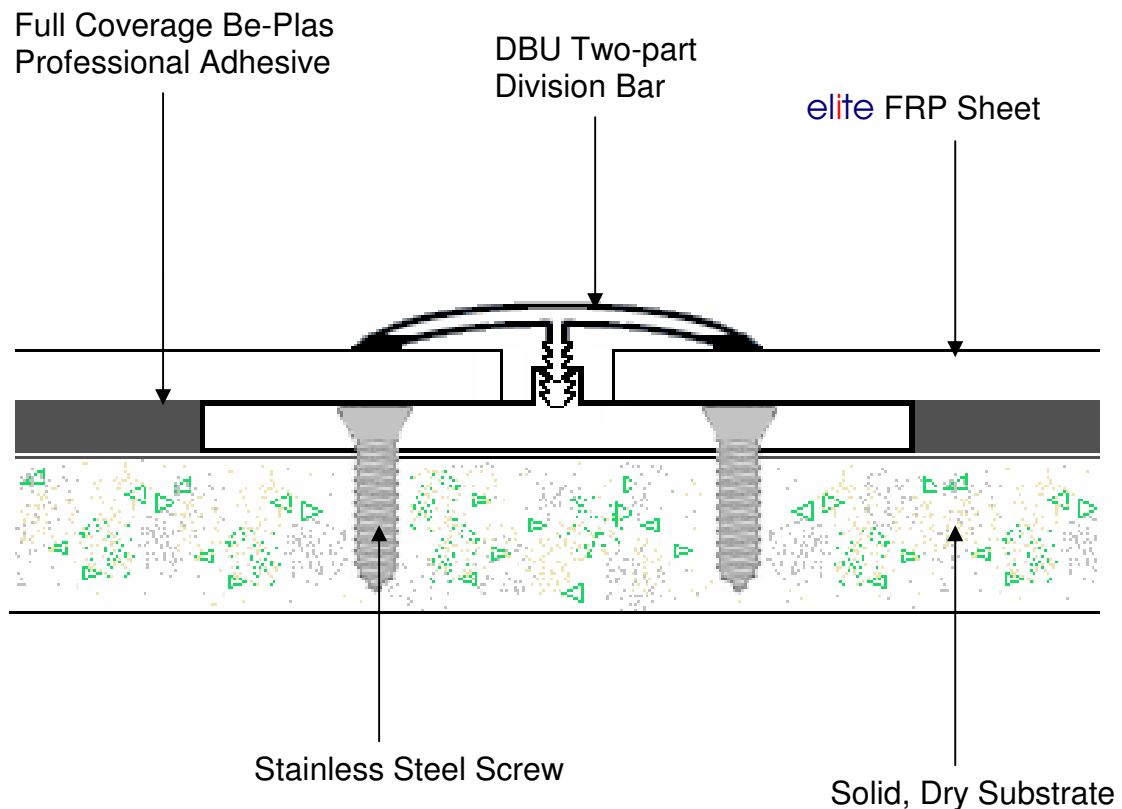

Note: Adhesive may be used (in place of screws) to fix to suitable substrates. When using screws, always use rawl plugs or similar anchors.